


INSTRUCTIONS FOR YOUR

# Acrylic Standoff Hardware


## HARDWARE

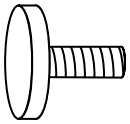

CAP



WASHERS

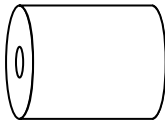

BARREL




SCREW



WALL ANCHOR

Note: Don't let things get all scratchy! Place your art on a smooth, flat surface when assembling. To clean, use a water dampened cloth or an acrylic safe cleaner. Provided anchors can be used for hollow wall types.

1. Use the Pre-Drilled Holes in your Acrylic as a template, mark the wall for the location of the Wall Anchors and Screws.
2. Install Wall Anchors or Toggle Bolts appropriate for your wall type and the weight of your piece.
3. Unscrew the hardware set. Use the provided Screws to attach the Barrels to the wall.

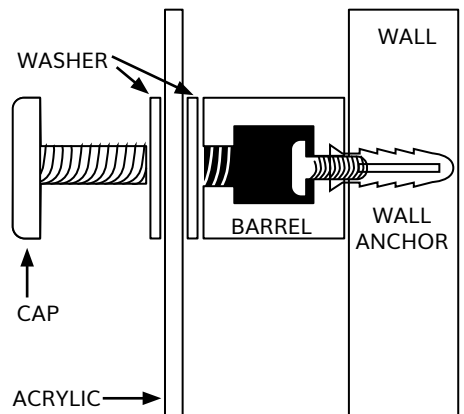

4. Place a Washer on each side of your Acrylic and thread the Cap through the Pre-Drilled Hole in your Acrylic. Screw the Cap into the Barrel on the wall. Repeat for all sides.

Note: There are a lot of ways to hang a frame, and that choice belongs to the user. Whatever way is chosen, please be sure to take every precaution to protect your property and person as we disclaim any and all liability for damage, loss or injury.