


# INSTRUCTIONS FOR ASSEMBLING YOUR Wood Frame w/ Screws

## HARDWARE

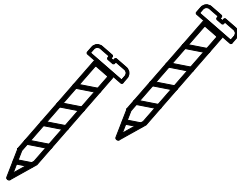


SCREWS



GLUE

Note: Don't let things get all scratchy! Place your frame face down on a smooth, flat surface when assembling.

1. Lay your four pieces of Moulding face down in their approximate assembly position. Ensure the Holes in the frame are lined up.
2. Start at one corner. Put a bead of Glue along the inside edge where the two sides come together, then push the two pieces together. Be careful not to get Glue on the face of the Frame or Liner if one exists.

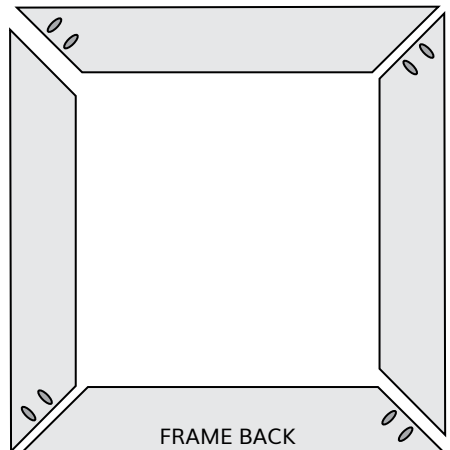

3. Line up the holes in the corners of the Moulding and insert Screws. Do not put Glue in the holes. Tighten Screws lightly.

4. Repeat steps 2 & 3 with the remaining corners.

5. Turn Frame over and remove any excess Glue. Align corners and tighten Screws. Allow the Glue to dry for 2 hours and preferably overnight before framing your piece.

